

RS-1-A & RS-2

IF YOU CANNOT READ OR UNDERSTAND THESE INSTALLATION INSTRUCTIONS DO NOT ATTEMPT TO INSTALL OR OPERATE

LOCATION INSTRUCTIONS

The RS-1-A or RS-2 remote control receiver covers are intended to give the receiver a limited amount of protection from the heat, but is **not** designed to totally protect the receiver from flame or heat.

- 1. After connection of the remote receiver to the gas valve. Check the remote control completely for proper operation.
- 2. Locate the remote control to the right or left front corner of the firebox. As far away from the burner, but within the fireplace opening. (Behind the fireplace screens is a good place)
- 3. Place the RS-1-A or RS-2 over the receiver with the face of the receiver to the open side of the RS-1-A or RS-2. This will allow access to the slide switch on the face of the receiver.
- 4. Make sure that the wires from the receiver to the gas valve are located so they will not be damaged by heat.

